


Camera Drive Unit
WV-PS11B

Operating Instructions



Panasonic®

Before attempting to connect or operate this product,
please read these instructions completely.

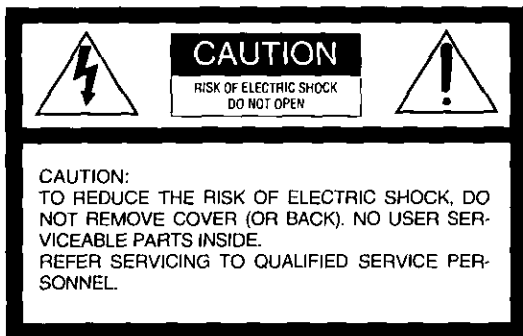

SA 1965

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



SA 1966

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Caution:

Before attempting to connect or operate this product, please read the label on the bottom.

For U.S.A.

Warning:

This equipment generates and uses radio frequency energy and if not installed and used properly, i.e., in strict accordance with the instruction manual, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment.

The serial number of this product may be found on the bottom of the unit.

You should note the serial number of this unit in the space provided and retain this book as a permanent record of your purchase to aid identification in the event of theft.

Model No. WV-PS11B

Serial No. _____

WARNING:

TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CONTENTS

PREFACE	2
FEATURES	2
PRECAUTIONS	3
MAJOR OPERATING COMPONENTS AND THEIR FUNCTIONS	4
CONNECTIONS	5
SPECIFICATIONS	9

PREFACE

The Panasonic Camera Drive Unit WV-PS11B is specially designed to drive specified cameras such as WV-BP70 or WV-CP100.

This simple system is specially designed for surveillance and security needs at offices, factories, schools, hospitals, public or residential buildings, etc.



FEATURES

- Stable DC power is supplied to the specified camera by a regulator in the camera drive unit.
- A single coaxial cable connects the specified camera and camera input of the camera drive unit.
- Three signals, video, DC power and vertical drive pulses, are carried by a single coaxial cable (used with the WV-BP70 or WV-CP100 camera.).
- Audio signals can be transmitted from the specified camera to the camera drive unit (used with the WV-CP100 or WV-CF20 camera.).
- VD/SYNC input and output connectors for synchronizing in the parallel operation.
- Built-in protection circuit protects the appliance in case of wrong connection.

PRECAUTIONS

- Do not block the ventilation opening or slots on the cover to prevent the appliance temperature from rising.
 - Do not attempt to disassemble the appliance.
To prevent electric shock, do not remove screws or covers. There are no user-serviceable parts inside.
 - Handle the appliance with care.
Do not abuse the appliance. Avoid striking, shaking, etc. It could be damaged by improper handling or storage.
 - Do not expose the appliance to rain or moisture.
Avoid trying to operate it in wet areas.
Take immediate action if ever the unit becomes wet. Turn the power off and refer servicing to qualified service personnel. Moisture can damage the appliance, and cause danger due to electric shock.
 - Do not use strong or abrasive detergents when cleaning the appliance body.
Use a dry cloth to clean the unit when dirty. In case the dirt is hard to remove, use a mild detergent and wipe gently.
- Do not drop any metallic parts through slots.
This action could damage the appliance permanently. Turn the power off immediately and refer servicing to qualified service personnel.
 - Use the appliance under conditions where temperatures are within -10°C - $+50^{\circ}\text{C}$ (14°F - 122°F), and humidity is below 90%. The input power source is 120V AC 60 Hz.
Do not operate the appliance in an extreme environment where is out of its specified temperature or humidity range, or power source ratings.

MAJOR OPERATING COMPONENTS AND THEIR FUNCTIONS

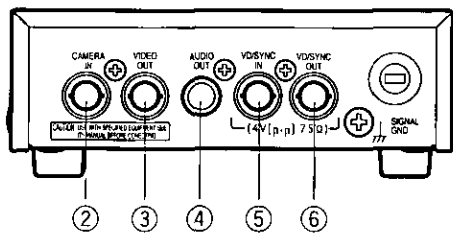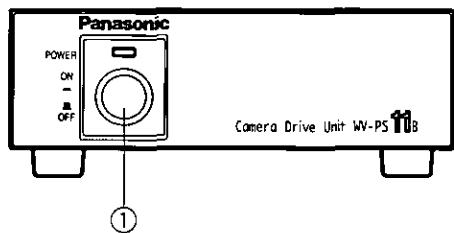

① Power On/Off Switch (POWER, ON/OFF)

This switch is used to turn the camera drive unit and connected specified camera power on or off. The indicator lights up when the power of the camera drive unit is on.

② Camera Input Connector (CAMERA IN)

This connector accepts either a color or B/W composite video signal from the specified camera. It also supplies DC power and vertical drive pulses or synchronizing signals to the camera, and receives video and audio signal from the camera.

③ Video Output Connector (VIDEO OUT)

The video signal of the specified camera is provided at this connector for input into the video monitor.

④ Audio Output Connector (AUDIO OUT)

The audio signal of the specified camera is provided at this connector for input into the video monitor (used with the WV-CF20 or WV-CP100 camera.).

⑤ VD/SYNC Input Connector (VD/SYNC IN)

The VD (Vertical Drive) pulse or VS (Video Sync) signal is supplied to this connector for synchronizing the system.

⑥ VD/SYNC Output Connector (VD/SYNC OUT)


The VD (Vertical Drive) pulse or VS (Video Sync) signal is provided at this connector for synchronizing other system component.

CONNECTIONS


Cautions:

- Set the POWER switch of the camera drive unit to OFF (⏻) during connections. If the power of the camera drive unit is ON during connections, the protection circuit that protects it in case of wrong connection will operate and prevent the camera from functioning.
- Connect only a specified camera, WV-BP70, WV-CF20 or WV-CP100. If another camera is connected, the camera drive unit will not operate due to activation of the protection circuit.

<Single Camera>

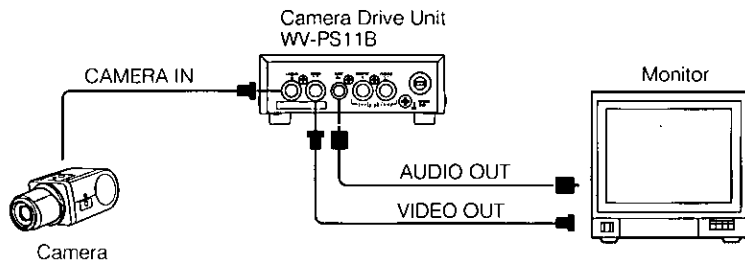

<Multi Camera System with External SYNC Operation>

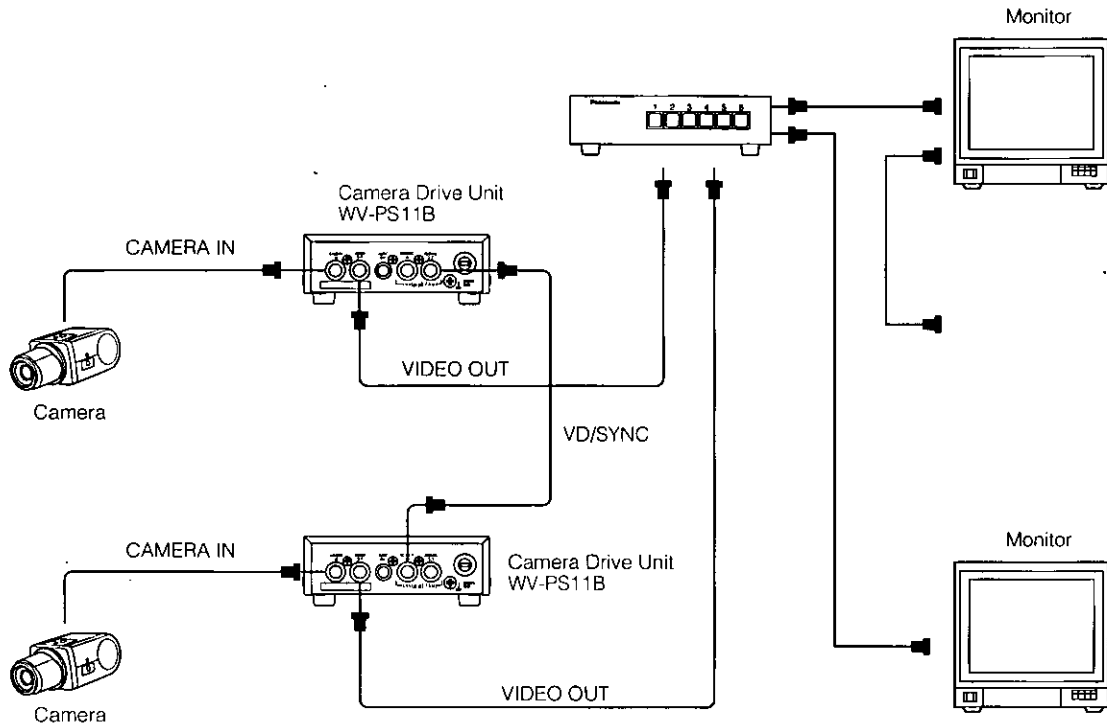

1. Connect the coaxial cable between the camera and CAMERA IN connector of the camera drive unit. The approximate maximum cable length is as follows:

Coaxial Cable Type	DC R/1000 ft. of Inner Conductor	Maximum Cable Length
RG-59/U	Less than 30 Ω	200 m (660 ft.)
RG-6/U	Less than 12 Ω	500 m (1650 ft.)

The maximum DC resistance of the cable between the camera and camera drive unit is 20 Ω .

2. Connect the coaxial cable between the video monitor and VIDEO OUT connector of the camera drive unit. The approximate maximum cable length is as follows:

Type of coaxial cable		RG-59/U (3C-2V)	RG-6/U (5C-2V)	RG-11/U (7C-2V)
Recommended Maximum cable length	(m)	250	500	600
	(ft)	825	1,650	1,980

Note:

If the length of the coaxial cable between the camera drive unit and the video monitor exceeds the distance shown in the above table, a cable loss compensator should be used between the camera drive unit and the video monitor.

 
3. After connecting the specified camera to the camera drive unit, connect the audio cable between the monitor and AUDIO OUT connector of the camera drive unit.

External VD/SYNC Signal


Signal Level

The VD/SYNC IN connector accepts the VD or VS synchronizing signal for external synchronization.


- VD: 4 V_[p-p] / 75 Ω



 - Composite Sync: $4\text{ V[p-p]} / 75\ \Omega$



- VS: $1\text{ V[p-p]} / 75\ \Omega$

 

Relation between VD/SYNC IN and VD/SYNC OUT

The signal from the VD/SYNC OUT connector differs according to the connected camera and the signal supplied to the VD/SYNC IN connector of this unit.

The signal supplied from VD/SYNC OUT is as follows:

Signal to VD/SYNC IN	No signal	VD signal	Composite signal
Connected Camera			
WV-BP70 or WV-CP100	Composite signal	VD signal	Composite signal

Accuracy of vertical signal

Vertical frequency: $59.940052\text{ Hz} \pm 0.00161\text{ Hz}$

SPECIFICATIONS 1

Power Source:	120 V AC 60 Hz		
Power Consumption:	Approx. 16 W		
Camera Input:	1.0 V[p-p] / 75 Ω , BNC Connector		
Video Output:	1.0 V[p-p] / 75 Ω , BNC Connector		
Audio Output:	-10 dB / 600 Ω unbalanced, RCA pin jack		
Camera Power Supply:	Regulated current multiplex method (310 mA)		
Maximum Distance to Camera:	Coaxial Cable Type	DC R/1000 ft. of Inner Conductor	Maximum Cable Length
	RG-59/U	Less than 30 Ω	200 m (660 ft.)
	RG-6/U	Less than 12 Ω	500 m (1650 ft.)
Maximum DC Resistance:	Between camera and camera drive unit: 20 Ω .		
VD/SYNC Input:	4.0 V[p-p] / 75 Ω Negative going or VS 1 V[p-p] / 75 Ω , BNC Connector		
VD/SYNC Output:	4.0 V[p-p] / 75 Ω Negative going, BNC Connector		
Ambient Operating Temperature:	-10 $^{\circ}$ C - +50 $^{\circ}$ C (14 $^{\circ}$ F - 122 $^{\circ}$ F)		
Ambient Operating Humidity:	Less than 90 %		
Dimensions:	138 (W) X 44 (H) X 185(D) mm 5-7/16" (W) X 1-3/4" (H) X 7-5/16" (D)		
Weight:	1.3 kg (2.9 lbs.)		

Weight and dimensions shown are approximate.
Specifications are subject to change without notice.

Panasonic

Broadcast & Television Systems Company

Division of Matsushita Electric Corporation of America

IMAGING SYSTEMS DIVISION

Executive Office: One Panasonic Way 3E-7, Secaucus, New Jersey 07094

Regional Offices:

Northeast: 43 Hartz Way, Secaucus, NJ 07094 (201) 348-7303

Southeast: 1225 Northbrook Parkway, Suite 1-160, Suwanee, GA 30174 (770) 338-6835

Midwest: 1707 North Randall Road, Elgin, IL 60123 (847) 468-5200

Southwest: 4500 Amon Carter Blvd., Fort Worth, TX 76155 (817) 685-1117

Western: 6550 Katella Ave. 17A-5, Cypress, CA 90630 (714) 373-7265

MATSUSHITA ELECTRIC OF CANADA LIMITED

5770 Ambler Drive, Mississauga, Ontario, L4W 2T3 Canada (905)624-5010

PANASONIC SALES COMPANY

DIVISION OF MATSUSHITA ELECTRIC OF PUERTO RICO, INC.

San Gabriel Industrial Park, 65th Infantry Ave. KM. 9.5 Carolina, Puerto Rico 00630 (809)750-4300

N1096-0

YWV8QA4372AN

Printed in Japan

(N) 30